

SonoFlat Systems™

SFS-184

Installation Guidelines

Congratulations on purchasing a SonoFlat™ SFS-184™ System from Auralex® Acoustics.

You're now on your way to creating a world class listening environment.


SonoFlat Systems offer a sophisticated look by utilizing a specialized flat-faced cut of Auralex's industry-leading Studiofoam®. The SFS-184 system contains SonoFlat Panels, SonoColumns and Q'Fusors, which when used together, provide incredibly effective broadband absorption and diffusion in any room. Use the SFS-184 alone for treatment of small to medium-sized rooms or in combination with other Auralex products for full control of larger spaces.

Thank you for Purchasing Auralex® Total Sound Control® Products!

SonoFlat SFS-184 System Components



32



SonoFlat Panels™

8



SonoCollars™

8



SonoColumns™

6



Q'Fusors™

12



Tubetak Pro™



SonoFlat SFS-184 General Information

Recommended Additional Installation Materials

- Caulk-gun (for Tubetak Pro)
- Tape measure
- Carpenters Level
- Small ladder (depending on ceiling height)


Optional Additional Installation Materials

- Foamtak Spray Adhesive*
- T-Pins 

* This system includes **Tubetak Pro Adhesive**, which is safe to use on all included products. You may wish to use Auralex's **Foamtak** Spray Adhesive for quicker drying times. **Foamtak** is available through all Auralex authorized dealers. **Do NOT use Foamtak to install Q'Fusors.**

Q'Fusor Installation Guide

- 1 Apply **Tubetak Pro** to the back of the **Q'Fusor**, as pictured.

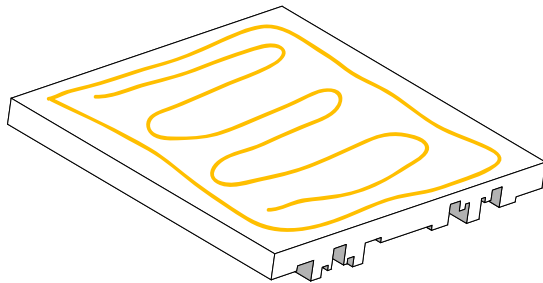

- 2 Carefully press **Q'Fusor** into the face of a **SonoFlat Panel** or directly to the surface of a wall or ceiling.



TIP

If you plan on painting the Q'Fusor, make sure to do so before applying it to the wall or ceiling.




CAUTION

Use only water-based paints on the Q'Fusor. Oil-based paints will cause severe deterioration of the product.


SonoColumn Placement Options

1

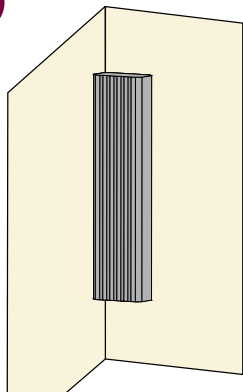


Flush in corner

2

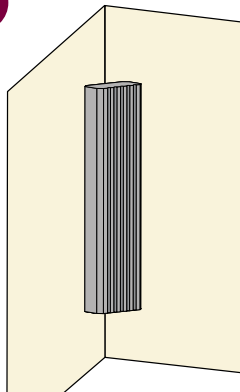


At 45° to corner

3

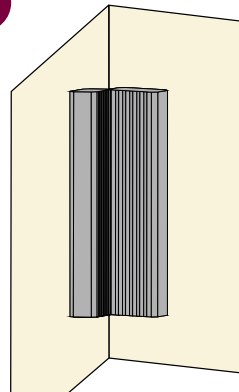

Side-by-side in corner

4

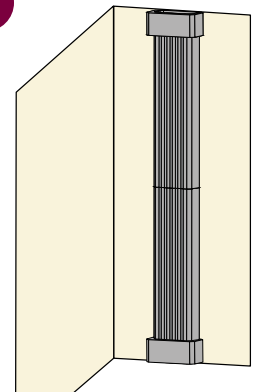


On wall w/ Collars




SonoColumn Installation Guide

- 1 Mark intended location of each **SonoColumn**.

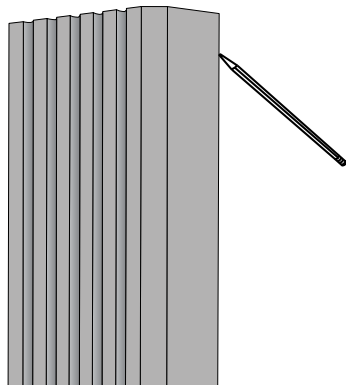


- 2 Apply **Tubetak Pro** to either the back or the beveled edge of the **SonoColumn**, depending on chosen placement.

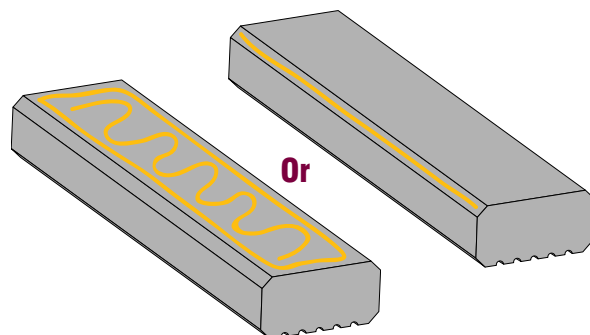

- 3 Carefully press **SonoColumn** to the marked location of the wall or ceiling. Maintain continuous pressure. Depending on environmental and surface conditions, it will take anywhere from 2-4 minutes to hold.

- 4 Place **SonoCollar** around **SonoColumn**, if desired. The inside section of each **SonoCollar** can also be used to increase the height of the **SonoColumn** by 6".

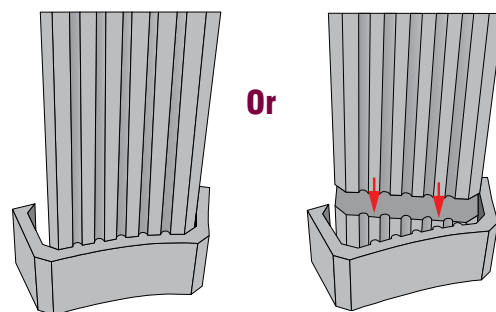


TIP


For a stronger hold, with the adhesive applied, press **SonoColumn** firmly into place, immediately remove panel and press it firmly again into the same spot.

SonoFlat Panel Installation Guide

- 1 Mark intended location of each **SonoFlat Panel** on the wall or ceiling.

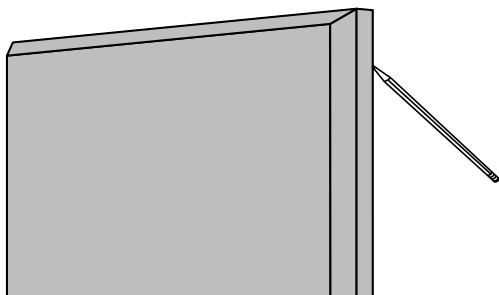

- 2 Apply **Tubetak Pro** to the back of the **SonoFlat Panel**, as pictured.

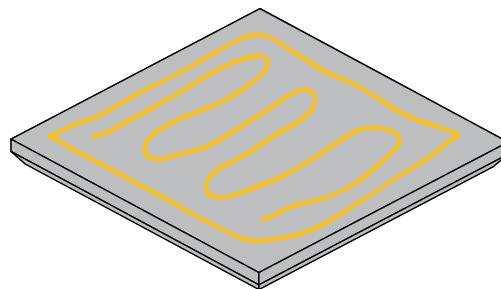

- 3 Carefully press **SonoFlat Panel** to the marked location. Maintain continuous pressure. Depending on environmental and surface conditions, it will take anywhere from 2-4 minutes to hold.




TIP

You can use T-Pins to temporarily hold the panel in place while the adhesive sets.



SonoFlat System Installations

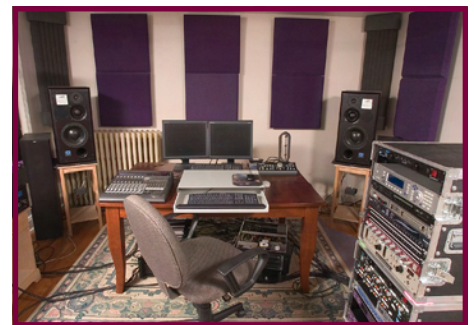

See the **Auralex® Acoustics** website, www.auralex.com, for more information about these and other **Total Sound Control®** products.

These are general recommendations. Should you have any additional questions about the installation of your **SonoFlat™ System**, feel free to contact an **Auralex® Application Specialist** via email at appsupport@auralex.com or call 1-800-95-WEDGE.

